
PIN. HOLE CAMERA CONSTRUCTION



Procedure

- 1. Cut out and assemble sections A and B as shown on the reverse side of this hand out. Make sure that section A will slide into section B as shown in the diagram above.
- 2. Cover the hole in the end of section B with foil and tape it down. Use a pin to poke a single hole in the foil.
- 3. Over the open end of section A, directly behind where the hole in the foil would be, tape down a piece of wax paper. Try not to " buckle " the open end of section A when doing this.
- 4. CLEAN UP! Equipment is returned and the scrpa pieces of black cardboard are put into the garbage, NOT left lying around on the floor, desk, etc.

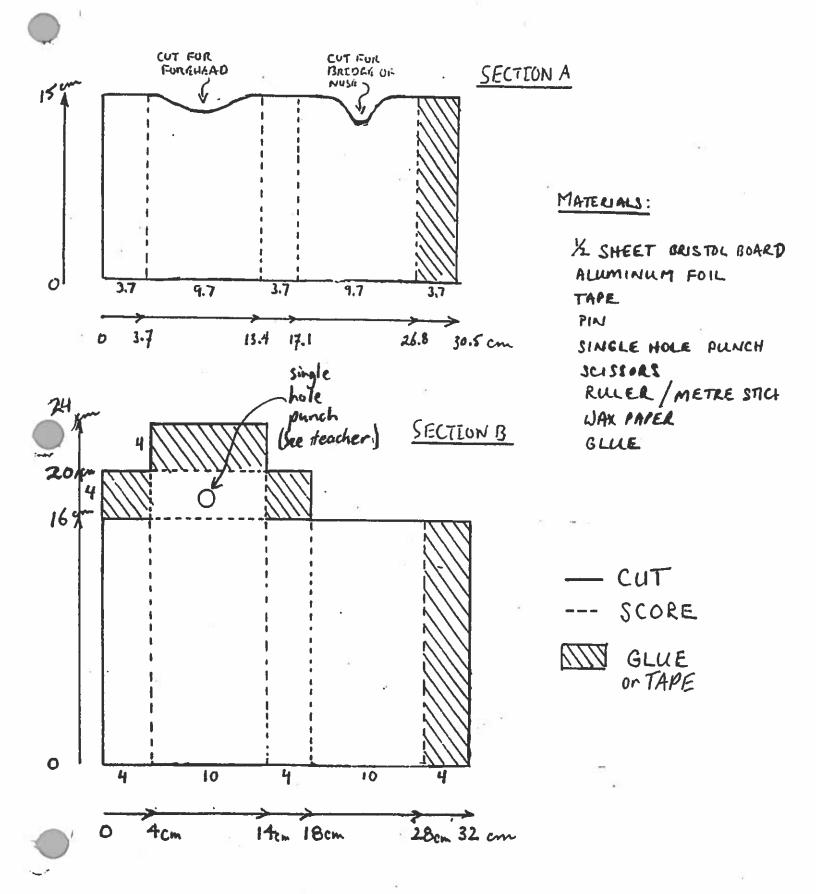